Unsleeved Card Crate

Compatible with standard game boxes





Assembly Guide

Use an exacto

knife to cut the

bits connecting

the parts to the

Use a drop of

glue along the

ioints and hold

it in place until

sufficiently dried.

 
the glue has

frame.





Remove the parts from the frame with a rotating motion along the axis formed by the bits vou just cut.



Use the exacto knife to remove any of the remaining connection bits.



LASEROX

Always dry-fit the parts to together without any glue to make sure you are assembling the correct parts.



Press the parts together or use a hobby hammer with slight force for assembly.

This box organizer is compatible with standard game boxes.





WARNING Choking hazard! Not for children under 14 years.

Use wood glue for assembly. Always dry fit the parts first to make sure the components are correct ones. If you encounter any issues, please contact











us at info@laserox.net or our Facebook page at facebook.com/laseroxinserts.

Unsleeved Card Crate

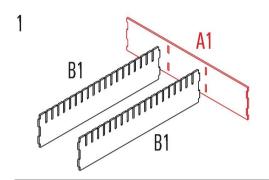

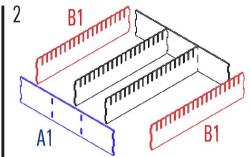

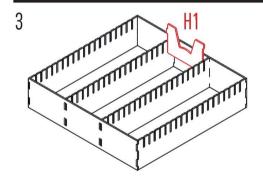

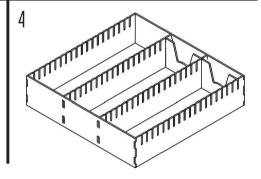

Required parts: **A1**x2, **B1**x4, **H1**x9 (optional)

